


# 90011 BASKET ASSEMBLY INSTRUCTIONS


Depending on bike model, there are 3 options for attaching the basket strut to the frame.

1. Install "┐" Bracket (15) onto the rear dropout and tighten with screw M5x10mm (16)

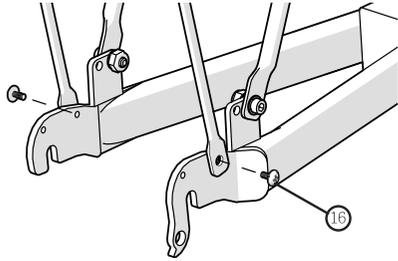


FOR MODEL: T-3 CX \ ECO-TAD SX \ FAT-TAD CX

2. Install "┐" Bracket (15) onto the sleeve tube of frame and tighten with screw M6x20mm (17)

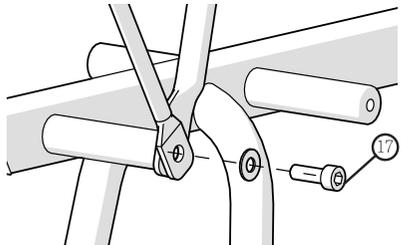

FOR MODEL: EZ-CLASSIC SX

3. Install "┐" Bracket (15) onto the rear tabs of the main frame and tighten with screw M6x20mm (17)

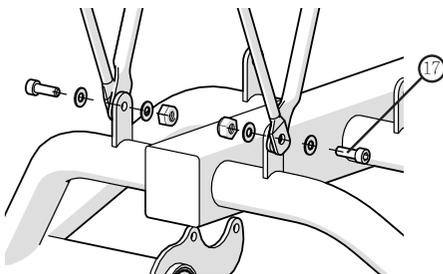


FOR MODEL: EZ-3 USX HD \ X-3 AX  
EZ-TRI CLASSIC SX \ ECO-DELTA SX

\*For  $\phi 22.2$ mm seat frame tubing:





Use  $\phi 25.4$ mm Clamp (1) + 80mm Rubber Gasket (3)

\*For  $\phi 15.9$ mm seat frame tubing:

Use  $\phi 19$ mm Clamp (2) + 45mm Rubber Gasket (4)

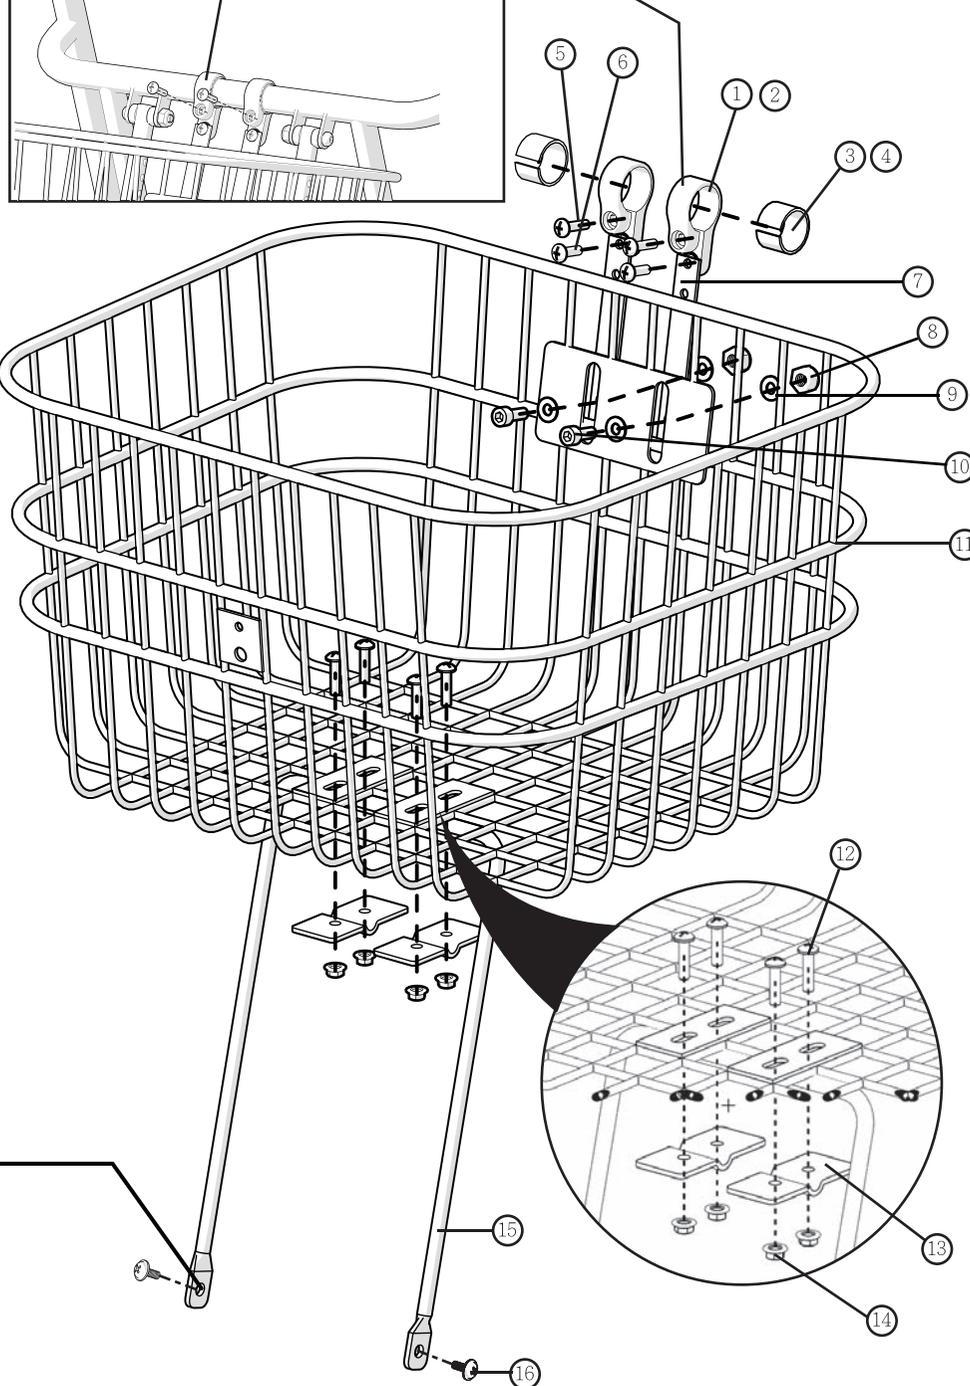

## PARTS LIST
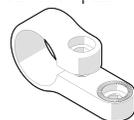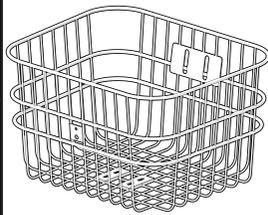
<p>1 CLAMP <math>\phi 25.4</math>mm</p>  <p>2 PCS</p>	<p>10 HEX SOCKET CAP SCREW M6x16mm</p>  <p>2 PCS</p>
<p>2 CLAMP <math>\phi 19</math>mm</p>  <p>2 PCS</p>	<p>11 BASKET</p>  <p>1 PCS</p>
<p>3 RUBBER GASKET 80mm</p>  <p>2 PCS</p>	<p>12 BUTTON HEAD SOCKET M5x20mm</p>  <p>4 PCS</p>
<p>4 RUBBER GASKET 45mm</p>  <p>2 PCS</p>	<p>13 BRACKET</p>  <p>2 PCS</p>
<p>5 ROUND HEAD PHILLIPS SCREW M5x20mm</p>  <p>2 PCS</p>	<p>14 FLANGE NUT M5</p>  <p>2 PCS</p>
<p>6 ROUND HEAD PHILLIPS SCREW M5x16mm</p>  <p>2 PCS</p>	<p>15 BASKET STRUT</p>  <p>1 PCS</p>
<p>7 BASKET BRACE</p>  <p>2 PCS</p>	<p>16 ROUND HEAD PHILLIPS SCREW M5x10mm</p>  <p>2 PCS</p>
<p>8 NUT M6</p>  <p>2 PCS</p>	<p>17 HEX SOCKET CAP SCREW M6x20mm</p>  <p>2 PCS</p>
<p>9 WASHER M6</p>  <p>4 PCS</p>	