
290644 FENDER ASSEMBLY INSTRUCTIONS FOR E-ECO-TAD B1 SX

Parts List

A	Front Fender	2 PCS
B	Front Fender Strut 1	2 PCS
C	Front Fender Strut 2	2 PCS
D	Rear Fender	1 PC
E	Rear Fender Strut	2 PCS
F	M5 x 12mm Bolt	6 PCS
G	M5 x 18mm Bolt	1 PC
H	M5 x 5mm Nylock Nut	6 PCS
I	M5 x 10mm Bolt	4 PCS
J	M5 x 16mm Bolt	2 PCS
K	ϕ5 x ϕ12 x 1t Washer	5 PCS
L	ϕ10xϕ5.5x10mm Spacer	1 PC





Front

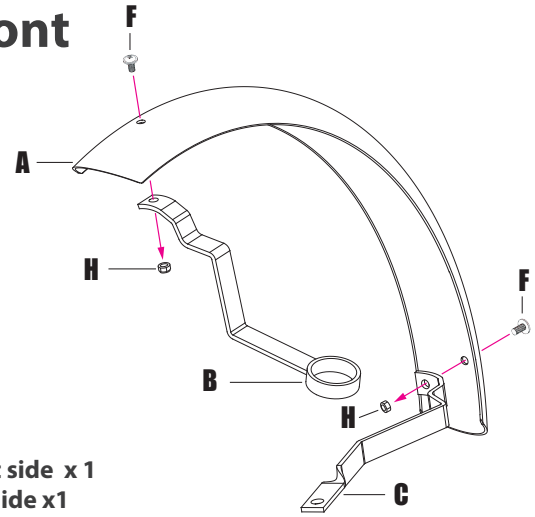

Right side x 1
Left side x1

Rear

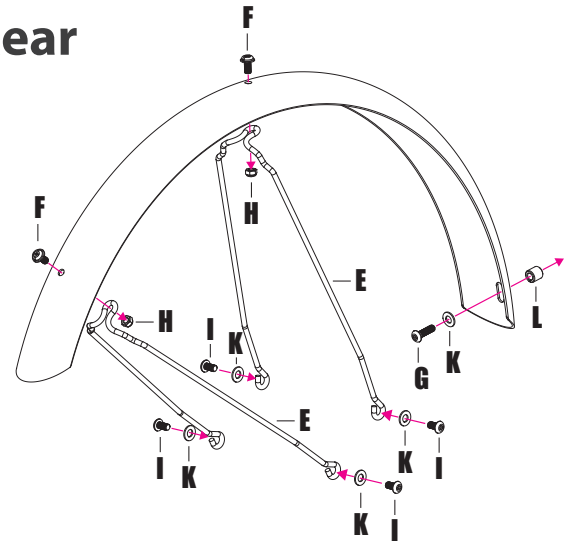


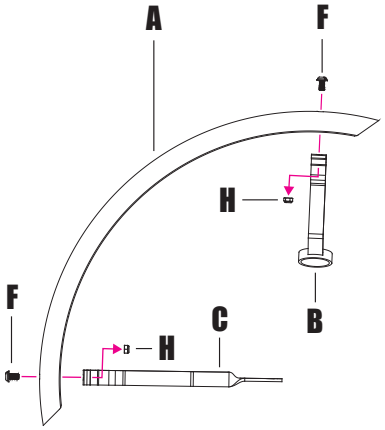

STEP 1.

Install fender strut 1 (B) and strut 2 (C) onto the front fender (A) tighten bolts (F) and nylock nuts (H).


NOTE: L & R sides are symmetrical direction.

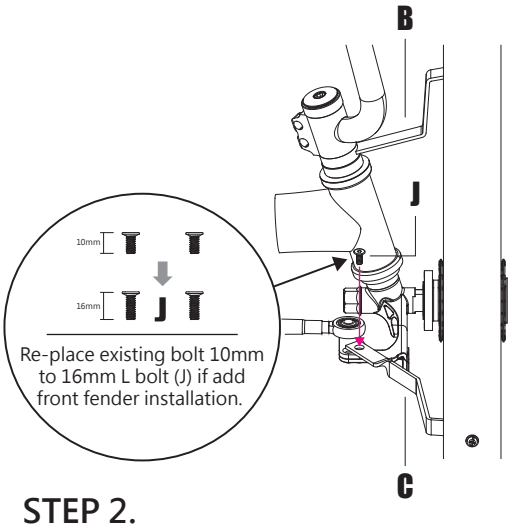

STEP 2.


Install the front fender (A) onto the steer tube and insert the ring of fender strut (B) in place of 2nd spacer. Install the fender strut (C) onto the adapter tighten bolt (J).

NOTE: same procedure on both left and right front fenders.

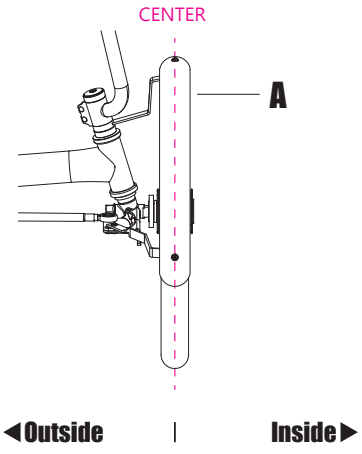


STEP 3.

Finish assembly on both sides. Adjust the fenders to be in the center position and make sure there is no fender interference when the tire rotation, as shown.

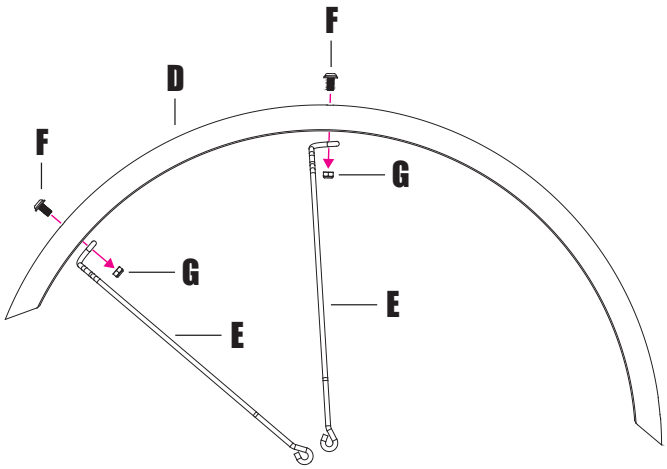


STEP 4.

Install fender strut (E) onto the rear fender (D) tighten bolts (F) and nylock nuts (G).

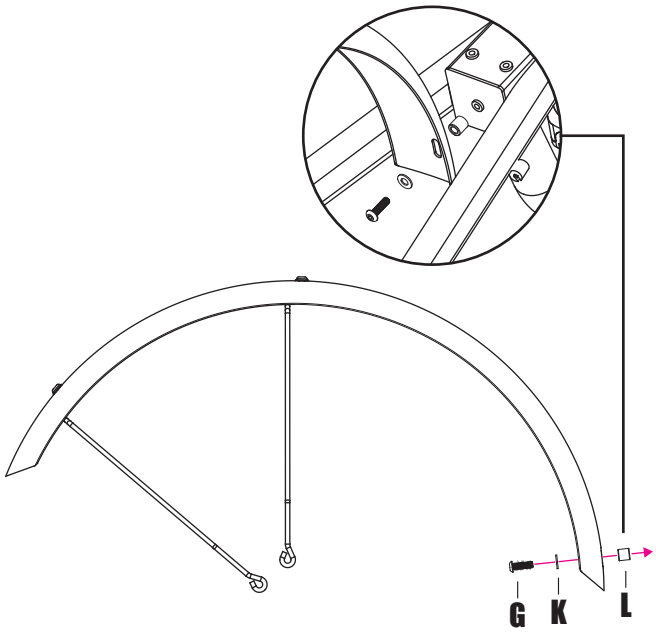


STEP 5.

Install the rear fender (D) onto the end of frame using bolt (G) and washer (K) and spacer (L) tighten.

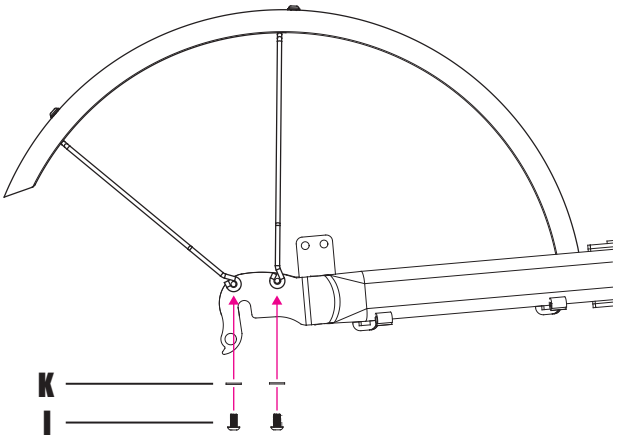

STEP 6.

Install fender struts (E) onto the frame dropout and secure with bolt (I) and washer (K).
Repeat for other side.

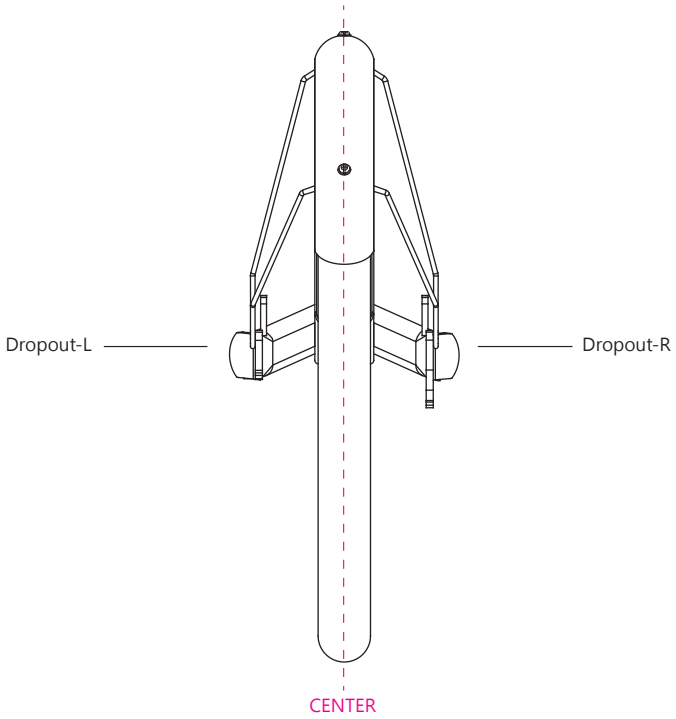

STEP 7.

Finish assembly. Adjust the fender to be in the center position and make sure there is no fender interference when the tire rotation, as shown.