

## 29666 FENDER ASSEMBLY INSTRUCTIONS FOR T-3 CX


### Part List

A	Front Fender	2 PCS
B	Front Fender Strut-1	2 PCS
C	Front Fender Strut-2	2 PCS
D	Rear Fender	1 PC
E	Rear Fender Strut	1 PC
F	Rear Fender Strut Bushing	1 PC
G	M8 x 35mm Screw	2 PCS
H	M5 x 35mm Screw	1 PC
I	M5 x 10mm Screw	2 PCS
J	M5 x 10mm Bolt	5 PCS
K	M5 x 5mm Nylock nut	5 PCS





### Front

Right side x 1  
Left side x 1

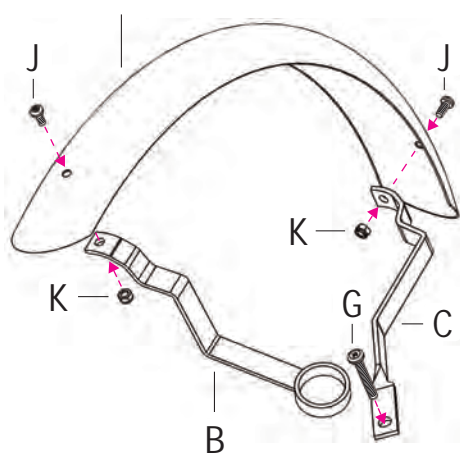


### Rear

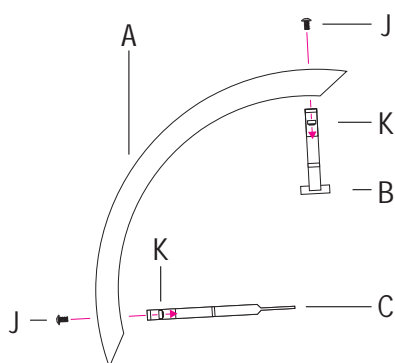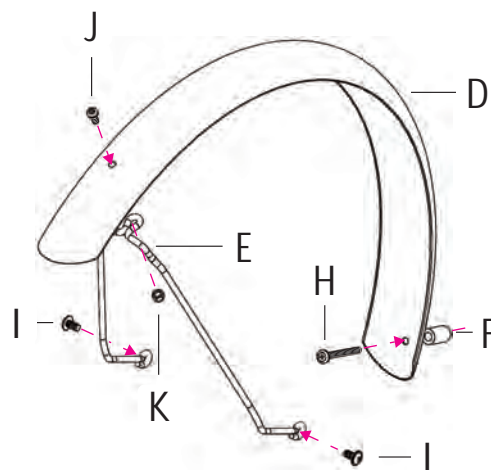

#### STEP 1.


Install fender strut-1 (B) and fender strut-2 (C) onto the front fender (A) tighten screw (J) and nylon nuts (K).

NOTE: L & R sides are symmetrical direction.

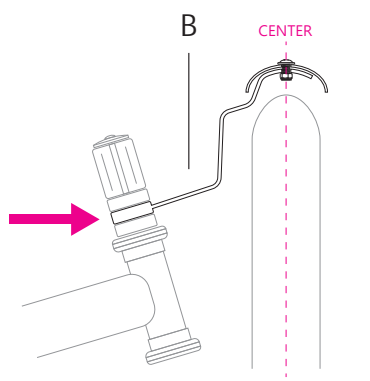

#### STEP 2.

Install the front fender (A) onto the steer tube and insert the ring of fender strut (B) in place of 2nd spacer.

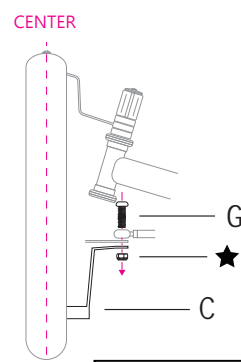


#### STEP 3.

Loosen the nut (★) on end of the steering linkage. Then install the fender strut (C) onto the steering arm tab hole using the screw (G) and nut (★) tighten.


NOTE: same procedure on both left and right front fenders.

Finish assembly on both sides. Adjust the fenders to be in the center position and make sure there is no fender interference when the tire rotates, as shown.

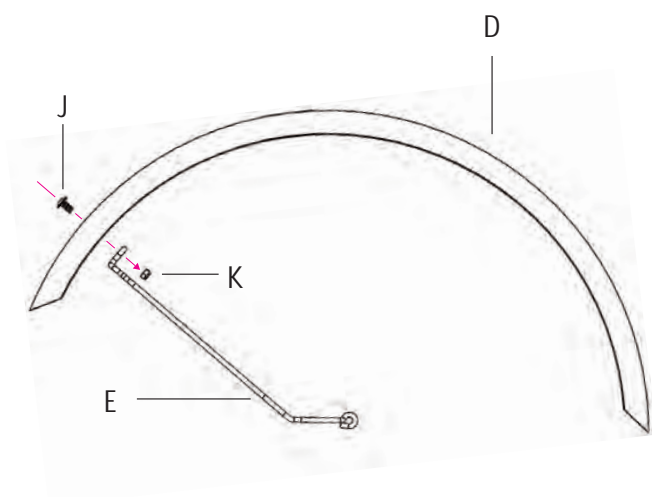


#### STEP 4.

Install fender strut (E) onto the rear fender (D) tighten bolt (J) and nut (K).

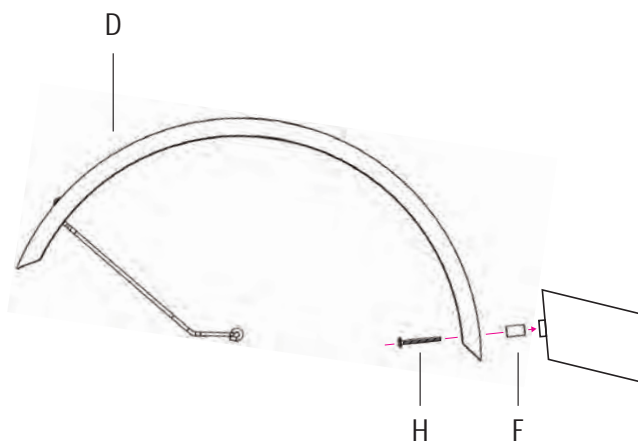


#### STEP 5.

Install the rear fender (D) onto the end of frame using the fender strut bushing (F) and screw (H) tighten.

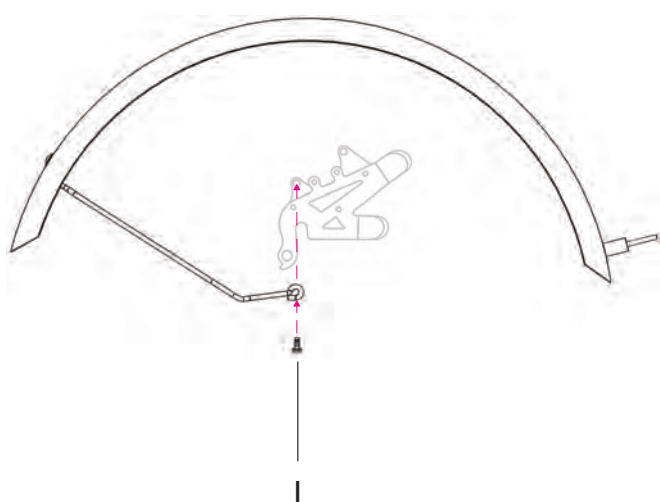

#### STEP 6.

Install fender strut (E) onto the frame dropout and secure with screw (I). Repeat for other side.

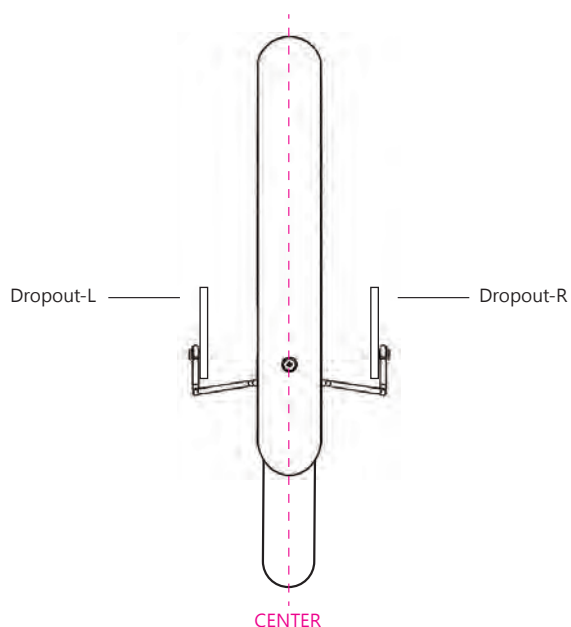

#### STEP 7.

Finish assembly. Adjust the fender to be in the center position and make sure there is no fender interference when the tire rotates, as shown.