
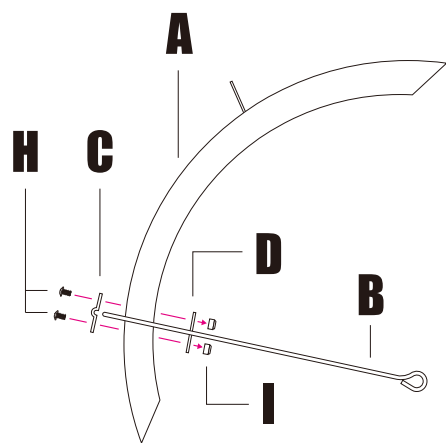


29672 FENDER ASSEMBLY INSTRUCTIONS FOR EZ-3 USX HD


Parts List

A	Front Fender	1 PC
B	Front Fender Strut	1 PC
C	Front Fender Strut Clamp A	1 PC
D	Front Fender Strut Clamp B	1 PC
E	Rear Fender	2 PCS
F	Rear Fender Strut	2 PCS
G	Rear Fender Strut Clamp	2 PCS
H	M5x10mm screw	10 PCS
I	M5 Nylock nut	8 PCS
J	M6x50mm bolt	1 PC
K	M6x40mm bolt	4 PCS
L	M6 Nylock nut	1 PC
M	M6 Washer	5 PCS

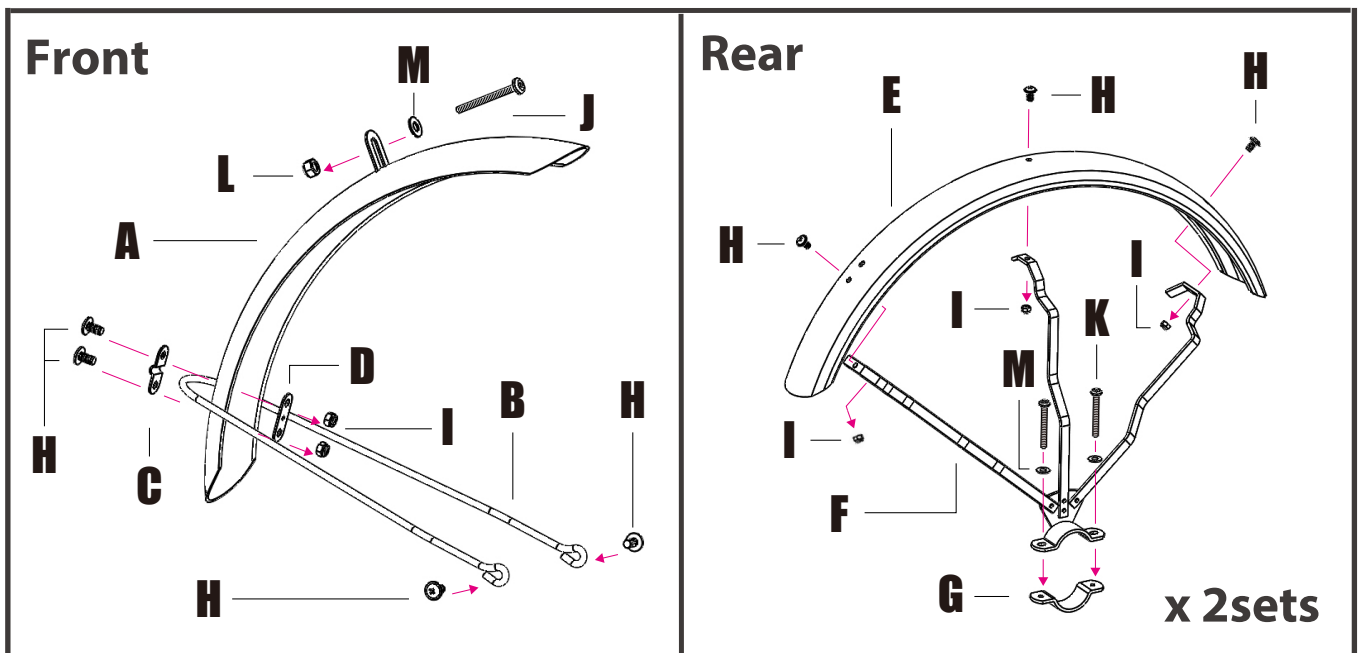

STEP 1.


Install fender strut (B) onto the front fender (A) with fender strut clamps (C, D) and secure with bolts (H) and nylock nuts (I) tighten.

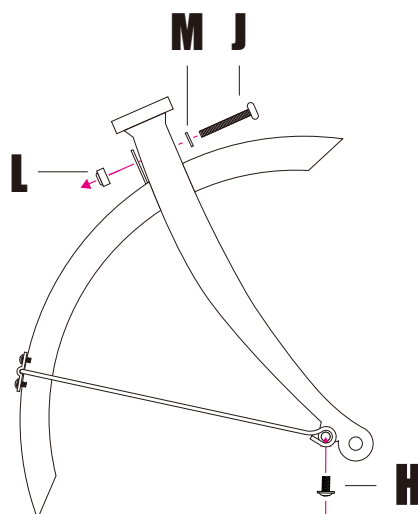

STEP 2.


Insert the front fender (A) into the fork and using the provided hardware (J, M, L) tighten.

Install fender strut (B) onto the fork dropout and secure with screw (H) tighten.

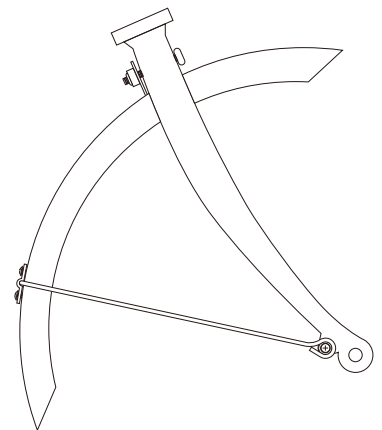


STEP 3.

Finish assembly. Make sure there is no fender interference when the tire rotating.

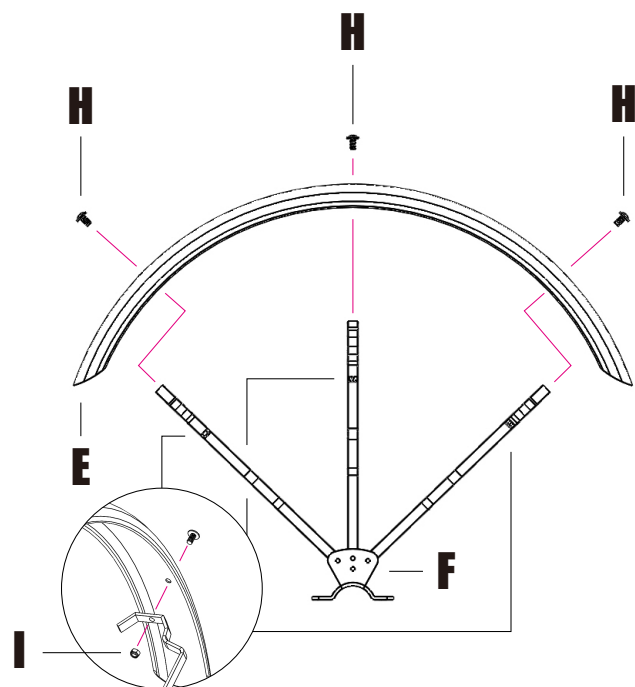

STEP 4.


Install fender strut (F) onto the rear fender (E). Align the position of the rear fender and fender strut then tighten bolts (H) and nylock nuts (I).

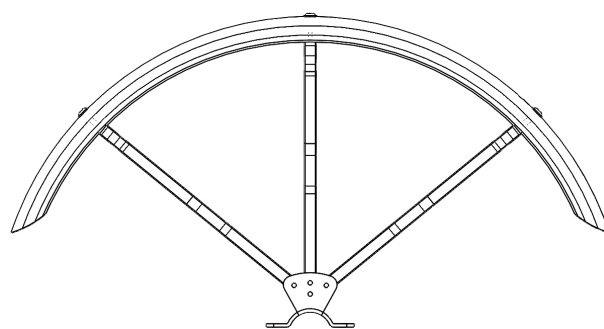

x 2sets

STEP 5.


Same procedure on both left and right rear fenders.

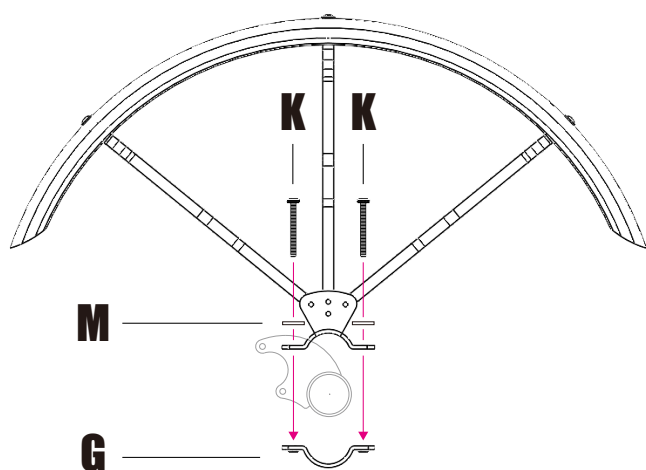

STEP 6.

Attach the rear fender onto rear unit frame with rear fender strut clamp (G) and secure with bolts (K) and washers (M) tighten.

Same procedure on both left and right rear fenders.

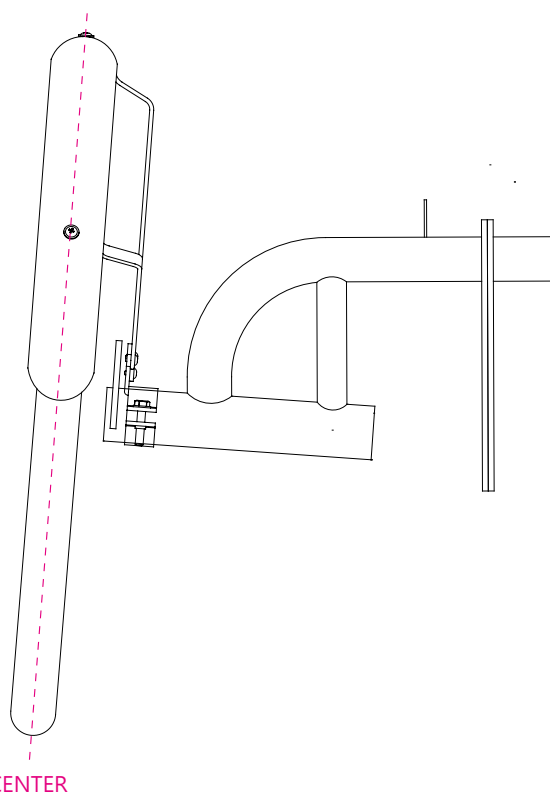

STEP 7.

Finish assembly on both sides. Adjust the fenders to be in the center position, as shown.